




BREAKAWAY SIGN  
PLACEMENT

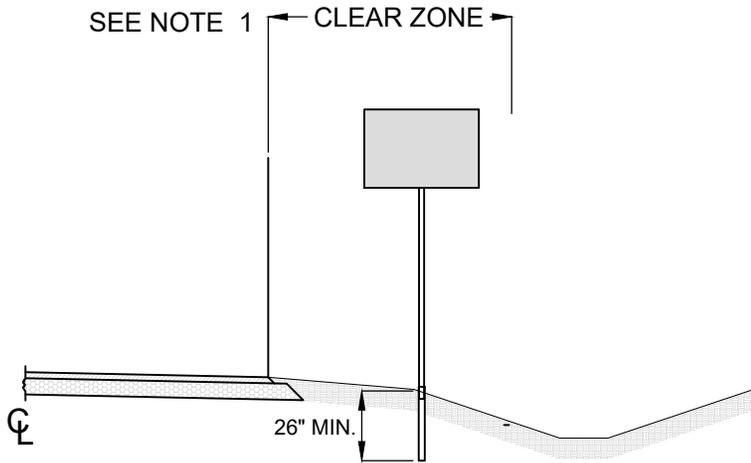

POST INSTALLATION

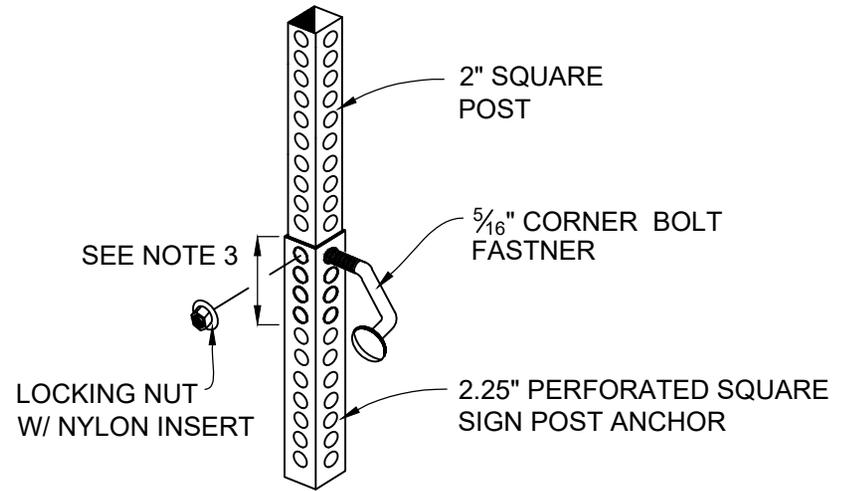

ANCHOR INSTALLATION

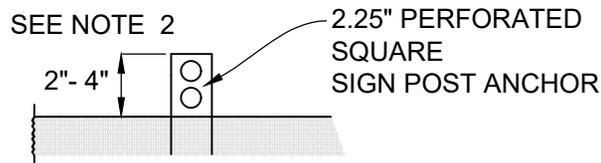

NOTES:

1. ON ALL ROADWAYS EXCEPT STREETS WITH STANDARD CURB AND GUTTER AND SPEED LIMITS EQUAL TO OR LESS THAN 25 MPH, ALL SIGNS WITHIN CLEAR ZONE SHALL BE OF A BREAKAWAY DESIGN THAT COMPLIES WITH THE LATEST EDITION OF AASHTO MANUAL FOR ASSESSING SAFETY HARDWARE (MASH) AND NCHRP REPORT 350.
2. DRIVE ANCHOR MINIMUM 26 INCHES INTO THE GROUND. LEAVE 2 INCHES MINIMUM TO 4 INCHES MAXIMUM TO PROTRUDE ABOVE SURFACE.
3. FIT POST INTO ANCHOR. FASTEN CORNER BOLT THROUGH THE FOURTH HOLE ON THE POST AND THE FIRST HOLE ON THE ANCHOR.
4. IN AREAS OF WEAK SOILS THE ANCHOR UNIT MAY BE BACKFILLED WITH CONCRETE, IF DETERMINED BY THE INSPECTOR.