
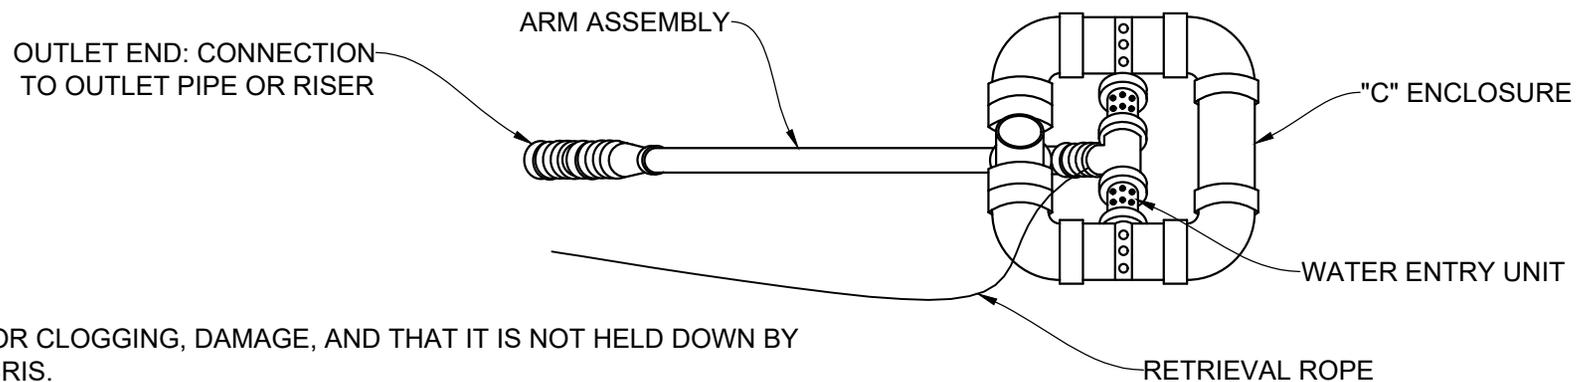


GENERAL NOTES:

1. SKIMMER SHOULD BE PLACED ON 4'X4' STONE PAD OF RIPRAP TO PREVENT STICKING.
2. ENSURE SKIMMER IS NOT INSTALLED UPSIDE DOWN.
3. ATTACH RETRIEVAL ROPE TO SKIMMER TO HELP MAINTAIN.
4. SKIMMER SHOULD RISE TO LEVEL OF WEIR HEIGHT IN TEMPORARY BASIN OR TO RISER INLET.
5. SKIMMER SHALL BE A DEVICE THAT DEWATERS FROM THE SURFACE OVER 2-5 DAYS.

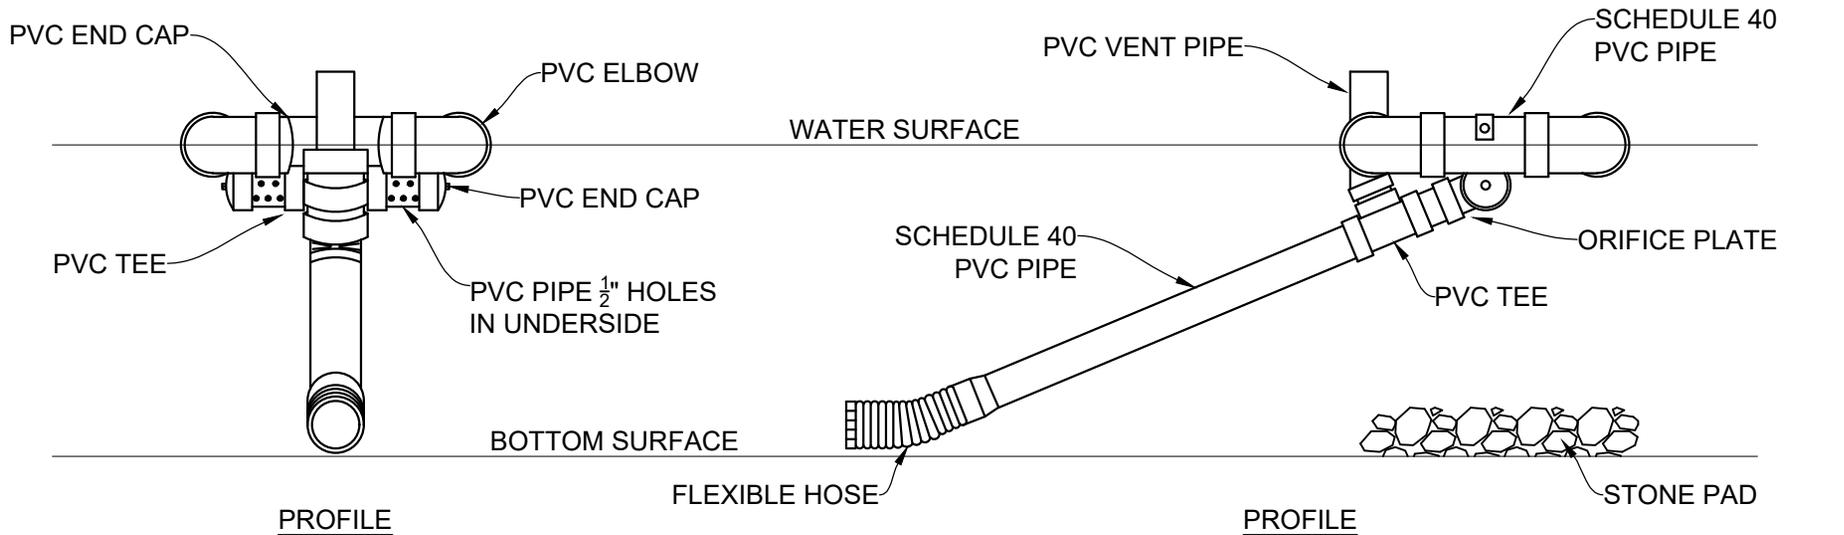

MAINTENANCE NOTES:

1. INSPECT SKIMMER FOR CLOGGING, DAMAGE, AND THAT IT IS NOT HELD DOWN BY VEGETATION OR DEBRIS.
2. IF DEBRIS HAS CLOGGED SKIMMER, TUGGING ON RETRIEVAL ROPE WILL HELP DISLodge. IF THIS DOES NOT WORK, DISASSEMBLE ORIFICE & REMOVE OBSTRUCTIONS. SKIMMER ARM & BARREL MAY NEED TO BE PLUMBED OR FLUSHED.