


FRONT VIEW

GENERAL NOTES:


1. USE SILT FENCE ONLY WHEN DRAINAGE AREA DOES NOT EXCEED 1/4 ACRE PER 100 LF OF FENCE AND NEVER IN AREAS OF CONCENTRATED FLOW.
2. END OF SILT FENCE NEEDS TO BE TURNED UPHILL.
3. WRAP THE SILT FENCE AROUND ALL EXISTING FIRE HYDRANTS SO THEY ARE FULLY VISIBLE FROM THE ROADWAY.
4. SILT FENCE SHOULD BE A MINIMUM OF 5 FEET FROM THE TOE OF SLOPE.
5. OVERLAP 12 INCHES WHEN SPLICING FABRIC.
6. ANCHORING OF TOE OF FENCE SHOULD BE REINFORCED WITH 12 INCHES OF NCDOT #5 OR #57 WASHED STONE WHEN FLOW WILL RUN PARALLEL TO TOE OF FENCE.

MAINTENANCE NOTES:

1. REMOVE SEDIMENT WHEN AT HALF HEIGHT OF SILT FENCE.
2. REPAIR OR REPLACE FENCE IMMEDIATELY WHEN TEARS, HOLES, SAGGING, COLLAPSE, OR OTHER DEFICIENCIES FOUND.
3. THE DESIGN LIFE OF A SYNTHETIC SILT FENCE IS APPROX. 6 MONTHS. DETERIORATED SILT FENCE MUST BE REPLACED.
4. SILT FENCE SHALL BE INSPECTED WEEKLY OR AFTER 1 INCH RAIN EVENT.
5. USE #57 WASHED STONE FOR REPAIR OF SILT FENCE FAILURES, AND FOR ANCHOR WHEN SILT FENCE IS PROTECTING CATCH BASIN.

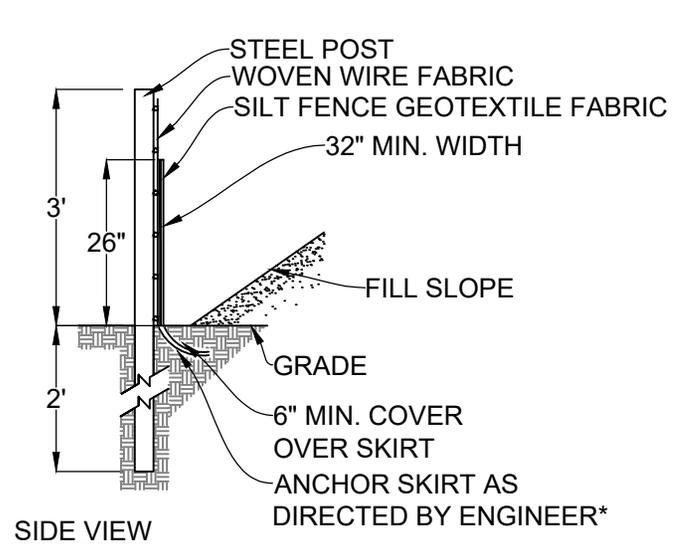

SIDE VIEW

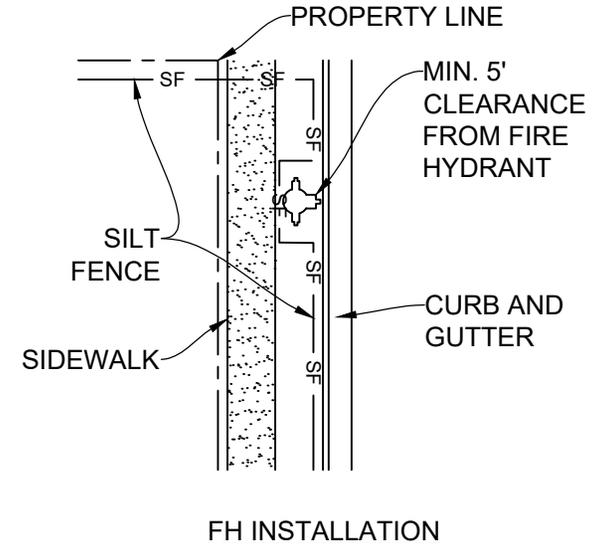

FH INSTALLATION